



**DEKKER**  
**VACUUM TECHNOLOGIES, INC.**

Installation  
Operation  
&  
Maintenance  
Manual

**ChemSeal**

Solvent-Sealed Liquid Ring Vacuum Pump Systems

# ChemSeal

## SOLVENT-SEALED LIQUID RING VACUUM PUMP SYSTEMS TABLE OF CONTENTS

<b>CUSTOMER SERVICE</b>	<b>5</b>
CONTACT INFORMATION	5
ORDER INFORMATION	5
<b>INTRODUCTION</b>	<b>6</b>
<b>SAFETY</b>	<b>6</b>
<b>THEORY OF OPERATION</b>	<b>6</b>
FULL RECOVERY SYSTEM	7
<b>STORAGE</b>	<b>7</b>
<b>INITIAL FREIGHT RECEIPT AND INSPECTION</b>	<b>7</b>
<b>INSTALLATION</b>	<b>8</b>
OVERVIEW	8
UNPACKING	8
LIFTING	8
LOCATION	8
MOUNTING	8
VENTILATION	8
ELECTRICAL PREPARATION	9
PIPE CONNECTION AND SIZING	9
INLET PIPING	9
DISCHARGE PIPING	10
COOLING WATER PIPING	10
SEAL FLUID PIPING	10
<b>START-UP PROCEDURES</b>	<b>11</b>
<b>SHUT DOWN PROCEDURES</b>	<b>15</b>
<b>MAINTENANCE</b>	<b>16</b>
PUMP BEARING LUBRICATION	16
MOTOR BEARING LUBRICATION (WHERE REQUIRED)	16
INLET FILTER (IF INSTALLED)	16
SEAL FLUID	16
SEAL FLUID STRAINER	16
SHAFT SEALS	16

VAPOR PRESSURE	17
<b>MAINTENANCE SCHEDULE</b>	<b>17</b>
FIRST 8 HOURS OF OPERATION	17
EVERY 25 HOURS	17
500 HOURS OF OPERATION	17
1000 HOURS OF OPERATION	17
10,000 HOURS OF OPERATION	17
30,000 HOURS OF OPERATION	17
<b>ACCESSORIES AND PROTECTIVE DEVICES (IF INCLUDED)</b>	<b>17</b>
ACCESSORIES	17
PROTECTIVE DEVICES	18
<b>TROUBLESHOOTING</b>	<b>18</b>
START-STOP PROBLEMS	18
<i>UNIT WILL NOT START</i>	18
<i>UNIT SHUTS DOWN WHILE RUNNING</i>	18
VACUUM PROBLEMS	19
<i>UNIT OPERATES, BUT DOES NOT ACHIEVE DESIRED VACUUM LEVEL</i>	19
OVERHEATING PROBLEMS	19
<i>UNIT OVERHEATS</i>	19
NOISE AND VIBRATION PROBLEMS	20
<i>UNIT IS MAKING AN ABNORMAL NOISE OR SOUND</i>	20
<i>UNIT IS VIBRATING EXCESSIVELY</i>	20



**THIS INSTALLATION, OPERATION, AND  
MAINTENANCE MANUAL MUST STAY WITH  
EQUIPMENT.**

**PLEASE REGISTER YOUR EQUIPMENT  
WARRANTY AND START-UP RECORD ONLINE  
AT WWW.DEKKERVACUUM.COM**

## **CUSTOMER SERVICE**

### **Contact information**



935 SOUTH WOODLAND AVENUE, MICHIGAN CITY, IN 46360-5672


TEL.: 219-861-0661 – FAX: 219-861-0662 – TOLL-FREE: 888-925-5444

Bus. Hours: 7:30 a.m. – 4:30 p.m. CST

Website: [www.DEKKERvacuum.com](http://www.DEKKERvacuum.com)

### **Order Information**

When calling for service, parts or system information always have the pump or system model number and serial number(s) ready. Refer to the bill of lading or the gold-colored system information plate attached to the system (see image below).

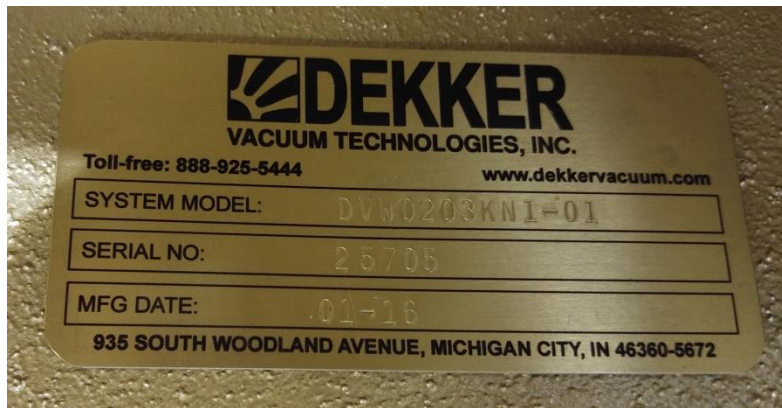

*Gold-colored system information plate*

Parts should be purchased from the nearest authorized DEKKER Vacuum Technologies, Inc. (hereafter referred to as DEKKER) representative (visit [www.dekkervacuum.com](http://www.dekkervacuum.com) to find a distributor via the Distributor Locator) or from the vacuum pump system supplier. If, for any reason parts, cannot be obtained in this manner, contact the factory directly.

## **INTRODUCTION**

The DEKKER **ChemSeal** solvent-sealed liquid ring vacuum pump system was designed with improved reliability and reduced maintenance costs. Compared with other vacuum pump systems the ChemSeal solvent-sealed liquid ring vacuum pump system offers the advantages of no metal-to-metal contact between the impeller and casing. Grease lubricated bearings are mounted external to the pumping chamber, isolated by mechanical shaft seals. This means that the pump requires no internal lubrication.

DEKKER systems have been designed to provide safe and reliable service with low maintenance. Because a vacuum pump is a rotating piece of equipment, the operator must exercise good judgment and follow proper safety procedures to avoid damage to the equipment or personal injury. Please review and follow all instructions in this manual before attempting to install, start or operate equipment.

## **SAFETY**

All vacuum pumps, systems and/or compressors (hereafter referred to as the Product) offered by DEKKER have been designed and manufactured for safe operation. However, the responsibility for safe operation rests with those who use and maintain these products. The safety department where the product is installed should establish a safety program based on OSHA, federal, state, and local codes. It is important that due consideration be given to hazards which arise from the presence of electrical power, hot liquids, harmful gases, and rotating equipment. Proper installation and care of protective devices is essential to safe system operation. These safety procedures are to be used in conjunction with the instructions contained in this manual.




**WARNING: DO NOT PUMP OXYGEN or oxygen rich mixtures with these pumps - EXPLOSION HAZARDS!**

## **THEORY OF OPERATION**

The DEKKER **ChemSeal** solvent-sealed liquid ring vacuum pump system includes our high efficiency liquid ring vacuum pump. The liquid ring vacuum pump is known for its simplicity in design and low maintenance requirements, due to the absence of wearing parts such as pistons, sliding vanes and internal bearings. The impeller assembly is the only moving part, which rotates freely in the casing without metal-to-metal contact. This means that no internal lubrication is required. The function of the sealing liquid is to create a liquid piston action and to remove the heat of compression. The seal-fluid in the system circulates in a closed loop (full recovery) configuration, which includes a water-cooled heat exchanger that removes the heat of compression. The discharge separator/reservoir holds the seal-fluid and incorporates a separator arrangement to separate the seal-fluid from the air or gases discharged by the pump. See Piping and Instrument Diagrams of the ChemSeal solvent-sealed liquid ring vacuum pump systems on the next page.

## Full recovery system

The DEKKER **ChemSeal** full-recovery liquid ring vacuum pump systems offer total re-circulation of the service liquid. In this arrangement the service liquid is re-circulated in a closed loop system through a heat exchanger, which removes the heat of compression. This arrangement is used when corrosive or toxic gases are conveyed. See the diagram below for a full-recovery ChemSeal system.

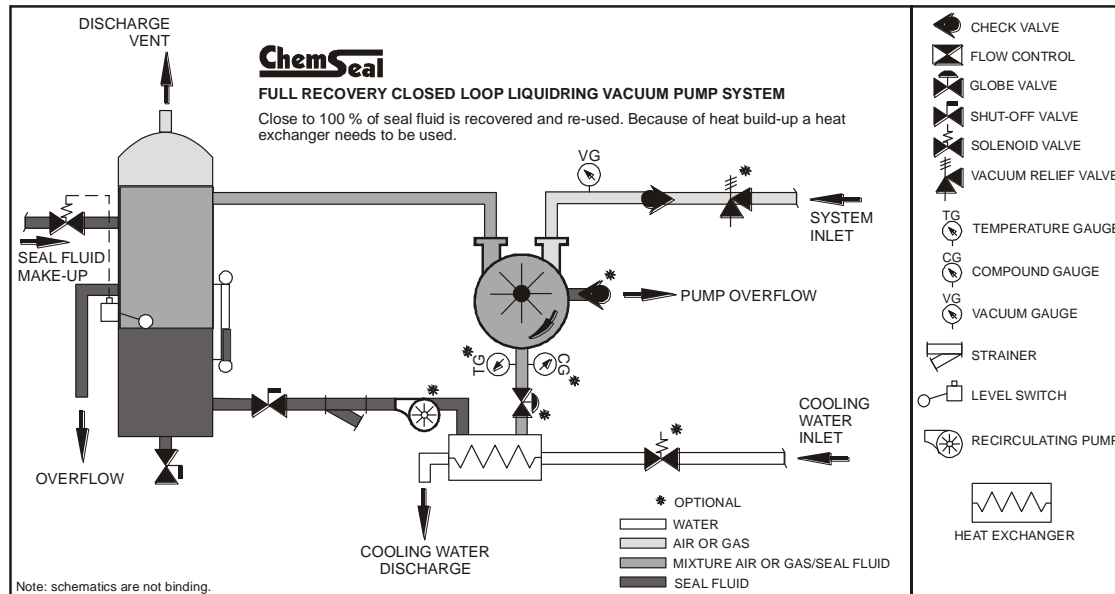

## STORAGE

Keep the system in a cool, dry environment and close the seal fluid isolation valve. Plug all open ports to keep out dirt and foreign objects. Every 2 weeks add a small amount of rust inhibitor into the inlet of the liquid ring pump and rotate the shaft by hand 2 ¼ turns.

After a long idle period, empty the pump completely and remove any scale deposit by using the specially formulated DEKKER descaling compound Scale-Ex. When the descaling process is complete, add a small amount of rust inhibitor and rotate the impeller by rotating the shaft by hand. If the shaft cannot be rotated, it may be because the is locked up. Contact the factory.

**NOTE:** Do not use Scale-Ex in Maxima pumps. For Maxima Series Pumps please see pump manual for long term storage procedures.

## INITIAL FREIGHT RECEIPT AND INSPECTION

Before a system ships from DEKKER, it is thoroughly tested, and will not be released unless it passes our Quality Control standards. All pumps are thoroughly inspected and are not released unless they pass our Quality Control standards. Once the product is received and signed for in Good Condition, DEKKER cannot be held accountable for undiscovered, unclaimed damage that is a result of freight transit. It is the responsibility of the receiver to thoroughly inspect and test the product for functionality upon delivery. The customer should take photos of the product as it arrives and send to DEKKER and the freight carrier if there are any issues. The party who selected the shipper is responsible for filing the freight claim. Failure to report these issues within the freight carriers' undiscovered damage window can result in non-acceptance of freight claims. DEKKER does keep photos of all systems, as shipped, to assist in freight claims. Report any damage immediately to the factory.

Key items to inspect:

- Is the product received as requested? Are all parts, accessories, and components delivered?
- Was the skid or crating received in good condition? Check for cosmetic damage.
- Check wiring inside of control panel. Are all wires should be terminated and connections tight? (If applicable)

- Check control panel components. Are they tight on DIN rail and/or other mounts/fasteners?
- Are there any leaks or puddles around the pump? Specify hose, piping or housing leak.

System must be given an initial startup test as soon as possible after delivery. This is to ensure that the motor has not shifted out of alignment during transit as well as to verify that electrical components are functioning without fault – Variable Frequency Drive (VFD), Programmable Logic Controllers (PLC), panel cooling fans, transducers.

## **INSTALLATION**

### **Overview**

The design of the piping system, foundation layout, and plant location are the responsibility of the purchaser. DEKKER Vacuum Technologies, Inc. and its representatives may offer advice, but cannot assume responsibility for operation and installation design.

Please consult the factory or a specialist skilled in the design of plant layout, system piping design, and foundation design. The installer should carefully read this manual before installing the equipment. DEKKER can provide start up assistance in most instances for a fee. Contact DEKKER for hourly/daily service rates.

### **Unpacking**

Upon receipt of pump or system, immediately inspect for signs of damage. Carefully remove packing or crating from around pump or system. Be sure to keep equipment in upright position.

### **Lifting**

Lift the equipment carefully and with weight evenly distributed. DEKKER is not responsible for equipment that has been damaged through mishandling or dropping.

### **Location**

Install the unit in a well ventilated and dust free area. The pump or system should be a minimum distance of 3 feet from surrounding walls to allow for checking fluid level, temperatures, pressures and general servicing.

### **Mounting**

The pump or system must be installed on a level surface in the horizontal position. The foundation must be designed to support the total unit weight, without any settlement or crushing, be rigid and substantial enough to absorb any equipment vibration, maintain true alignment with any drive mechanism, and must permanently support the system baseplate at all points. The vacuum system must be leveled and secured with anchor bolts. Anchor bolts must be of adequate size to withstand the mechanical stresses exerted on it.

Systems 50 HP and larger should also be grouted into position per local codes. The foundation should be constructed to allow for ¾ to 1-½ inch of grout. The baseplate is set on shims and the grout is poured between the foundation and the baseplate. To have the required body to support the baseplate, grout should be at least ¾ inch thick.

The number and location of shims will be determined by the design of the baseplate. Firm support should be provided at points where weight will be concentrated and at the anchor bolt locations. Use enough, and large enough, shims to provide rigid support. Baseplates are usually designed with openings to allow pouring grout. When the baseplate has been shimmed, leveled, and the anchor bolts have been snugly tightened, a dam is constructed around the foundation to contain the grout. The dam level should be at least ½ inch above the top surface of the shims. Grout should be poured inside and around the outside of the baseplate and leveled. Allow the grout to dry for a minimum of 48 hours before tightening the anchor bolts.

**Please note** that the pump/motor coupling and V-belt units will need to be realigned prior to start-up, with the exception of monoblock units.

### **Ventilation**

Locate the vacuum system in an area with sufficient airflow and accessibility. To prevent excessive ambient temperature rise it is imperative to provide adequate ventilation. Cooling is an important aspect of reliable



equipment operation and it is therefore important to install the unit in a reasonably cool area where the temperature does not exceed 100°F (38°C). For higher ambient temperatures contact the factory.

Check cooling water supply. A proper, consistent water flow must be maintained for adequate cooling.

## Electrical Preparation

All system wiring is performed at the factory if a control panel is supplied and installed on the skid. Check area classification to ensure all electrical enclosures comply with code. Required customer wiring is minimal, but should be done by a qualified electrician in compliance with OSHA, National Electric Code and any other applicable local electrical code concerning switches, fused disconnects, etc. DEKKER includes a wiring diagram in the control panel for use by the installer. DEKKER recommends a main disconnect switch be fitted between the vacuum system and the incoming power.

After the electrical wiring connections are completed, check the incoming voltage to make sure the incoming voltage is the same as the vacuum system voltage. Line voltage should be within the voltage tolerance as specified on the motor or to local code. Check the system for proper motor rotation. The direction of rotation is marked by an arrow on the motor or pump housing. Jog the motor by pressing the ON button and then the OFF button. If the rotation is incorrect, switch any two of the three main power leads (three phase power) on the contactor inside the control panel. Failure to do so could result in serious equipment damage.



**WARNING: Install, ground, and maintain equipment in accordance with the National Electrical Code and all applicable federal, state and local codes.**

**WARNING: For NFPA 99 hospital and generator applications, please shut down the vacuum pumps prior to generator testing. The rapid stop and restart may cause damage to the pump and/or motor and cause damage to electrical panel and related components.**

## Pipe Connection and Sizing

Before installation, remove all protective inserts on the pump suction and discharge. All piping connected to the system must be installed without imposing any strain on the system components. Improperly installed piping can result in misalignment, pump failure, and general operating problems. Use flexible connectors where necessary. Piping should be cleaned properly before installation.

## Inlet Piping

**Note:** Install a temporary screen at the pump inlet flange at first start-up to protect the unit against carryover of pipe debris and welding slag. The screen must be removed after the initial run in period.

Inlet piping should be at least the size of the pump inlet. Install the system as close as possible to the process to minimize losses due to the length of the suction line. If the system has to be installed further away from the process, be sure the inlet piping is properly sized to minimize the overall line pressure drop. For more information, contact call the factory.

Vacuum pump systems operating in parallel on a common manifold must each have a manual or automatic shut-off valve and a suitable check valve installed in the suction line close to the pump suction flange. This allows each individual system to be isolated when it is not in operation. The line size of the manifold should be a minimum equal to the sum of the individual system pipe areas.

Systems are supplied with an inlet check valve as standard. This valve is installed close to the pump suction flange to prevent back flow of process gas and seal fluid when the pump is stopped.

If the inlet gas pumped contains dust or foreign particles, a suitable 5 micron (or finer) inlet filter should be installed at the inlet port. For more information, contact factory.

If the possibility exists that the pump inlet can become closed during operation it will be essential to install some type of vacuum relief valve (anti-cavitation valve) so that air can enter the pump inlet.


**Never run a pump with a closed suction.** This causes hydraulic knock / cavitation and can damage the pump.

### Discharge Piping

Do not discharge the exhaust gases from the system into the area where the system is installed. Vapors pulled over from the process could be hazardous. Install an exhaust line of at least the same diameter as the discharge connection on top of the separator reservoir leading outside. See the “Discharge Piping Diagram” as shown below.

For systems operating in parallel on a common discharge, DEKKER recommends the installation of a suitable check valve close to the separator discharge flange of each unit. Discharge check valves should be a low differential pressure type with positive shutoff. This will prevent discharge gasses from back flowing to other systems. When discharging more than one pump in a common discharge line and/or over a long distance, oversize pipe accordingly.

### Discharge Piping Diagram

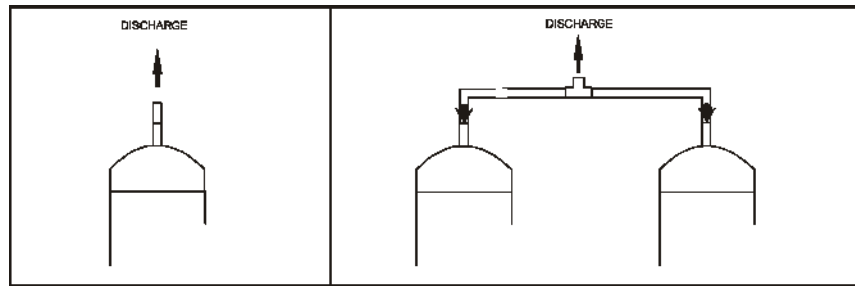

### Cooling Water Piping

**ChemSeal** systems require an adequate supply of cooling water at a maximum of 65°F and a minimum supply pressure of 20 psig. If the cooling water temperature is higher or available pressure lower, call the factory.


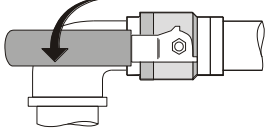
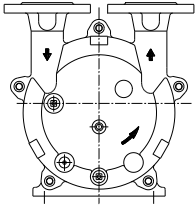
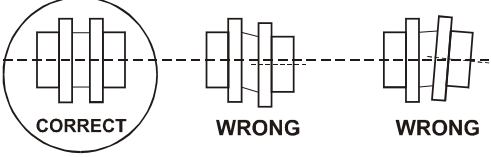
Normal pump discharge operating temperature is between 40°-75°F. This is only an average value and may need to be readjusted based on particular application processes.

### Seal Fluid Piping

No recovery ChemSeal systems require an adequate supply of seal water at a supply pressure of between 40 and 100 psig entering the flow control valve. If the sealing water temperature is higher or available pressure lower, call the factory.

Normal pump discharge operating temperature is between 40°-75°F. This is only an average value and may need to be readjusted based on a particular application.


## START-UP PROCEDURES

1	Ensure all shipping plugs and/or paper covers are removed from system and tagging information is followed for successful startup.	
2	Ensure seal fluid isolation valve is open. This valve is located before the y-strainer. Add a small amount of seal fluid into the pump inlet. Do not fill the pump above the shaft centerline.	 <p style="text-align: center;">Seal Fluid Isolation Valve</p>
3	Jog the motor briefly and check direction of rotation. An arrow on the motor or pump housing marks the correct direction of rotation. If direction is incorrect, switch any two of the three leads at the power connection (three phase only).	
4A	Check drive coupling alignment. Angular and parallel alignment should be within the following chart allowances (see next page, item 4A.1). Consult the factory for specific system size alignment. Mono-block units do not require any field adjustment (motors are C-face mounted).	


4A.1

**Alignment Chart**


Sleeve Size	Maximum RPM	Parallel Misalignment	Angular Misalignment	"B"
3	9200	0.01	0.035	1.188
4	7600	0.01	0.043	1.5
5	7600	0.015	0.056	1.938
6	6000	0.015	0.07	2.375
7	5250	0.02	0.081	2.563
8	4500	0.02	0.094	2.938
9	3750	0.025	0.109	3.5
10	3600	0.025	0.128	4.063
11	3600	0.032	0.151	4.875
12	2800	0.032	0.175	5.688
13	2400	0.04	0.195	6.625
14	2200	0.045	0.242	7.75
16	1500	0.062	0.33	10.25

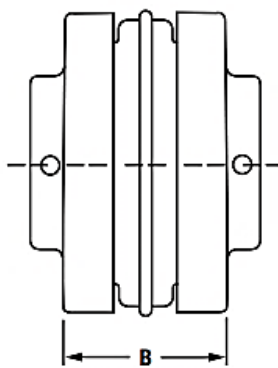

**Figure 1**  
**B Dimension**

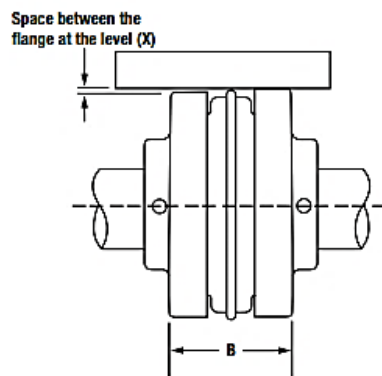

**Figure 2**  
**Parallel Measurement**

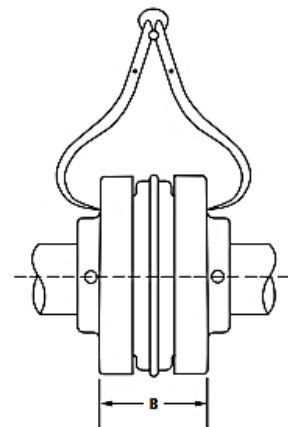

**Figure 3**  
**Angular Measurement**

<p>4B</p>	<p>For units utilizing V-belt drives, make sure the sheaves are properly installed and aligned before attempting to tension the drive. The V-belts should be placed over the sheaves and in the grooves without forcing them over the sides of the grooves. The tensioning steps below can be used for all types of V-belts, all cross sections and number of belts and all types of construction.</p> <p><b>Avoid excessive heat</b> (140°F and higher); belt life will be shortened. <b>Never switch or mix belts</b> from one groove to another on the sheaves. <b>Do not use belt dressing.</b> Sheaves should remain free of oil and grease. <b>When replacing belts install an identical set.</b></p> <p>For more specific V-belt tensioning guidelines consult factory.</p> <p>Sheave alignment should be checked by placing a straight edge or tight cord across the sheave faces so that it touches all four points of contact. Ordinarily, a misalignment of more than one-half of one degree (one eighth inch in one foot) will adversely affect belt life. Improper sheave alignment produces uneven wear on one side of the belt, causes the belt to roll over in the sheaves or throws the entire load on one side of the belt, stretching or breaking the cords on that side.</p> <p><b><u>Tensioning a Drive - General Rules of Tensioning</u></b></p> <ol style="list-style-type: none"> <li>1. Ideal tension is the lowest tension at which the belt will not slip under peak load conditions.</li> <li>2. Check tension frequently during the first 24-48 hours of run-in operation.</li> <li>3. Over tensioning shortens belt and bearing life.</li> <li>4. Keep belts free from foreign material which may cause slip.</li> <li>5. Make V-Drive inspection on a periodic basis. Tension belt when slipping. Never apply belt dressing as this will damage the belt and cause early failure.</li> <li>6. If the unit is idle for an extended period of time, the tension on the belts should be removed.</li> </ol>	<p><b><u>Simple Tensioning Procedure</u></b></p> <ol style="list-style-type: none"> <li>1. Measure the span length.</li> <li>2. At the center of the span apply a force (perpendicular to the span) large enough to deflect the belt 1/64", for every inch of span length. For example, one deflection of a 100 inch span would be 100/64 or 1-9/16 inches.</li> <li>3. Compare the force you have applied with the values given in <u>Table 4B.1 on the next page</u>. If the force is between the values for normal tension, and 1-1/2 times normal tension, the drive tension should be satisfactory. A force below the value for normal tension indicates an under tensioned drive. If the force exceeds the value for 1-1/2 times normal tension, the drive is tighter than it needs to be.</li> <li>4. After the proper operating tension has been applied to the belts, double check the following: A) Parallel position of the sheave shafts. B) Correct alignment of sheave grooves.</li> </ol> <p style="text-align: center;"><b><i>Tensioning rules and procedure courtesy of Dodge PT Manual MN-4002</i></b></p>
-----------	---	--

4B.1


**Tensioning Table**

 

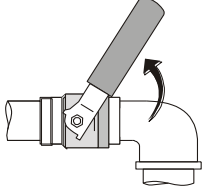

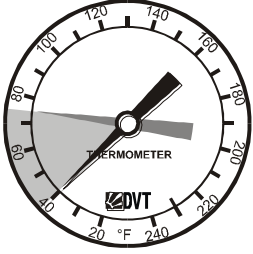
V-Belt Section	Small Sheave		Deflection Force			
	Speed Range	Diameter	1.0	1.5	2.0	4.0+
3VX	1200-3600	2.2	2.2	2.5	2.7	3
	1200-3600	2.5	2.6	2.9	3.1	3.6
	1200-3600	3	3.1	3.5	3.7	4.2
	1200-3600	4.1	3.9	4.3	4.5	5.1
	1200-3600	5.3	4.6	4.9	5.1	5.7
	1200-3600	6.9	5	5.4	5.6	6.2
5VX	1200-3600	4.4	6.5	7.5	8	9
	1200-3600	5.2	8	9	9.5	10
	1200-3600	6.3	9.5	10	11	12
	1200-3600	7.1	10	11	12	13
	900-1800	9	12	13	14	15
	900-1800	14	14	15	16	17
8VX	900-1800	12.5	18	21	23	25
	900-1800	14	21	23	24	28
	700-1500	17	24	26	28	30
	700-1500	21.2	28	30	32	34
	400-1000	24.8	31	32	34	36
5V	900-1800	7.1	8.5	9.5	10	11
	900-1800	9	10	11	12	13
	900-1800	14	12	13	14	15
	700-1200	21.2	14	15	16	17
8V	900-1800	12.5	18	21	23	25
	900-1800	14	21	23	24	28
	700-1500	17	24	26	28	30
	700-1200	21.2	28	30	32	34
	400-1000	24.8	31	32		36

*Tensioning Table and installation image courtesy of Dodge PT Manual MN-4002*

**Notes:**

1. Use approximately 130% of above values to tension a new set of belts.
2. Use closest sheave diameter for sizes not shown.

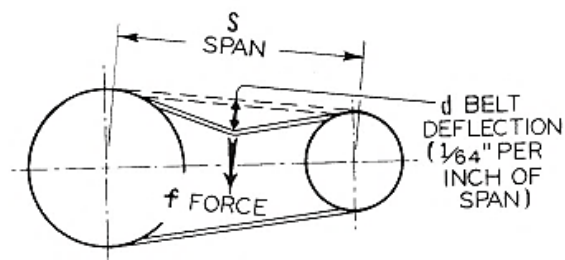

5	For full recovery systems, check fluid level in separator reservoir. The fluid level should be at the shaft center line.	
6	<p>If the system contains an inlet valve in the vacuum line, set it to approximately 3/4 closed, and start pump. If valve is not supplied, one should be installed.</p> <p style="text-align: center;"></p> <p><b>Warning:</b> Do not operate pump with suction open to atmosphere for long periods of time.</p> <p><b>Note:</b> Ideal vacuum is &gt; 15”HgV at sea level.</p>	
7	<p>Check the voltage and motor current. They should be within the specifications for the motor. Amperage should be checked at the Overload.</p> <p><b>Note:</b> This test should also be performed under normal system operating conditions.</p>	<p style="text-align: center;"></p> <p style="text-align: center;"><b>DANGER: HIGH VOLTAGE!</b> <b>Lethal shock hazard present.</b> <b>USE EXTREME CAUTION!</b></p>
8	<p>After 15-30 minutes of operation check pump discharge temperature, which should be in the 40°-75°F range. Please note specific applications can cause large variances in discharge temperature. Contact the factory for assistance.</p>	
9	Remove temporary inlet screen.	

## **SHUT DOWN PROCEDURES**

To stop vacuum system follow the procedure as outlined below.

- Push the STOP button or turn switch to the OFF position. The inlet check valve will prevent fluid from the system from flowing back into the inlet manifold.
- **Note:** If inlet piping could be under vacuum for an extended period of time without the pump running, inlet piping should be vented to atmosphere unless the process requires otherwise.
- **Note:** Close the seal fluid isolation valve and the pump inlet isolation valve during extended periods of storage or when transporting. See Storage section on page 7 for details. Open valves before starting system.

## MAINTENANCE



**WARNING:** Before attempting any maintenance such as changing the fluid, disconnect all power from the system by switching off the main breaker, isolate all energy sources and allow system to cool.

### **Pump Bearing Lubrication**

Refer to pump series manual for details.

### **Motor Bearing Lubrication (where required)**

For information regarding motor bearing lubrication, refer to the motor maintenance and operation manual.

### **Inlet Filter (If Installed)**

Check after first 8 hours of operation. Clean or replace inlet filter element every 1000 to 3000 hours depending on application or if excessive pressure drop is noticed. In some applications it may be necessary to clean inlet filter more often. Clean filters by gently knocking off into a dust bin. Brush filter free of debris and clean with a wet/dry vacuum cleaner. **DO NOT USE COMPRESSED AIR TO CLEAN ANY FILTERS!**

**CAUTION:** Be careful not to allow foreign material to fall in the pump suction opening when removing the filter cartridge. Horizontal filter installation is recommended to prevent this. Filters must be disposed of properly as they might contain toxic substances carried over from the process.

### **Seal Fluid**

The system is shipped from the factory without the service fluid. When charging the system with new fluid, make sure that the pump is filled with fluid to the shaft centerline level. **Do not fill the pump above the shaft centerline.** Starting the pump with fluid level above the shaft centerline may result in shaft or impeller damage or failure. Add fluid by removing the suction or discharge flange and pouring fluid through pump suction or discharge port.

If water is used as the service fluid, check water quality and if necessary provide for softening. Remove scale deposits with periodic circulation of DEKKER's **Scale-eX** descaling fluid.

### **Seal Fluid Strainer**

After the first 8 hours of operation, clean the strainer in the seal fluid line. This is done to remove any debris carried over from the seal fluid supply line. Clean and inspect the strainer every 500 hours.

### **Shaft Seals**

All DEKKER liquid ring vacuum pumps are fitted with mechanical shaft seals. Mechanical seals do not require maintenance unless there is more than a small amount of leakage. To define this we differentiate between the following:

**Weepage:** Mechanical seals work by having two flat surfaces pushed together by axial force from the closing mechanism and by product pressure in the seal chamber. When the seal is in operation, the seal fluid lubricates the two faces. This thin film of lubrication protects the faces of the seal from heat and excessive wear, but it can also allow for a small amount of leakage across the seal face. This small leakage is called a “weep”. While a weep has rather arbitrary limits, it is commonly considered to be a leakage rate of less than one drop of liquid every minute. Seal weeps are not covered under warranty.

**Leakage:** A leakage rate of more than one drop per minute is considered to be a “leak”. Seal leakage is normally a result of a build-up of abrasive particles carried over in the pump suction. These particles cause excessive wear on the seal faces. Leakage caused by wear and tear is not covered under warranty.

Seal replacement is addressed in the assembly and disassembly instruction for the specific pump model used. Consult factory for assistance.



## Vapor Pressure

For optimal performance of the pump or system when using high vapor pressure liquids as the seal- fluid, the temperature of the seal-fluid should be kept as low as possible to avoid a reduction in capacity. To achieve this keep cooling water temperature as low as possible.

## MAINTENANCE SCHEDULE

To help ensure trouble free system operation, a basic maintenance schedule consisting of the following system checks is recommended.

### First 8 Hours of Operation

- Check inlet filter element, if installed
- Clean strainers and remove temporary inlet screen
- Check piping for signs of leakage and tighten if necessary
- Check belt tension, if applicable

### Every 25 Hours

- Seal scavenger line, if installed, should be inspected every 25 hours for any type of contaminate (black dust, water, etc.). Consult factory if contaminants are found.

### 500 Hours of Operation

- Under normal operating conditions repeat the **First 8 Hour** steps above.
- Clean and inspect the y-strainer screen every 500 hours.

### 1000 Hours of Operation

- Clean or replace inlet filter element.
- Remove debris from pump housing, motor fan guard and heat exchanger.
- Applicable to pumps equipped with grease fittings located on each bearing housing. Grease bearings with a #2 quality lithium grease. Do not over-grease, 3 to 4 pumps with a grease gun is sufficient under normal conditions.

### 10,000 Hours of Operation

- Check coupling element for wear. Replace if worn.
- Clean strainer in seal fluid line.

### 30,000 Hours of Operation

- Every 30,000 hours, or every 5 years, it is recommended to replace the vacuum pump's shaft seals and bearings as preventative maintenance. This should be done by a DEKKER authorized distributor or properly trained service technician.

## ACCESSORIES AND PROTECTIVE DEVICES (IF INCLUDED)

### Accessories

The following accessories are available for ChemSeal solvent-sealed liquid ring vacuum pump systems:

- **Inlet or Discharge Flexible Connectors (optional):** These flex connectors are used in piping systems to eliminate vibration transmission from machinery throughout the piping network. If ordered, DEKKER uses braided flexible connectors.
- **Vibration Isolators (optional):** Vibration isolators are used to eliminate vibrations, noise, and shock transmission from machinery to the floor. Floor-mount type vibration isolators are used for ChemSeal vacuum pump systems. The vibration isolators have a steel top plate, threaded insert and steel base, both

totally imbedded in an oil-resistant neoprene. The isolators bolt onto a tank or base-frame with one bolt and have two mounting bolts to the foundation or floor.

- **System Isolation Valve (optional):** This valve may be installed on the vacuum receiver tank or vacuum pump manifold. Usually the valve is used to isolate the vacuum system from the piping network.
- **Inlet Filter (optional):** An inlet filter may be installed on the ChemSeal solvent-sealed vacuum pump systems to prevent carry-over of particles into the pump.
- **Vacuum Relief Valve (optional):** This valve may be installed on the pump suction manifold or on the receiver. The vacuum relief valve is used to protect the vacuum pump from closed suction, which can damage the pump.

## Protective Devices

The following protective devices are available to protect the unit from being damaged and to help with maintenance:

- **High Temperature Switch (optional):** The switch will signal when the temperature of the seal fluid is exceeding the shutdown level. The switch will shut the unit down. The unit will not restart until the alarm condition is acknowledged and is reset. The switch is a “snap disc” type of switch that is normally closed. When the temperature reaches the maximum set point, the switch will open. Once the switch has opened, there is a 10°-20°F differential that the temperature will need to drop to, in order for the switch to close.
- **No Seal-Fluid Flow Switch (optional):** This switch is installed in the seal-water piping of the liquid ring vacuum pump system. If the switch is triggered, the affected pump will shut down. The NO SEAL-FLUID FLOW light on the control panel will be illuminated. The NO SEAL-FLUID FLOW switch will be wired into the main alarm of the panel. The alarm will have to be reset to restart the pump.

## TROUBLESHOOTING

The following is a basic troubleshooting guide and not all options may be included. Service should be done by a DEKKER authorized distributor or a properly trained service technician. Each unit is tested and checked at the factory. Always indicate model and serial number when calling. The model and serial number is viewable on the gold-colored information plate attached to the unit.



**WARNING:** Before attempting any maintenance such as changing the fluid, disconnect all power from the unit by switching off the main breaker, isolate all energy sources and allow unit to cool. All electrical work should be done by a qualified electrician in compliance with OSHA, National Electric Code and any other applicable local electrical code.

## Start-Stop Problems

### ***Unit will not start***

1. Check the overload setting on the starter and fuses.
2. Ensure that the proper voltage is supplied and that the wire size is correct.
3. Check if the disconnect or circuit breaker is switched on.
4. Ensure that the service liquid level is correct, that the pump is primed and filled to the shaft centerline only.
5. Check if the bearings are greased.
6. Check if the pump has seized by rotating the coupling by hand, which should rotate freely. If a rubbing noise or binding is observed, contact the factory.
7. Check for scale build-up in pump if water is used as the seal-fluid. If necessary circulate Scale-eX descaling fluid.

### ***Unit shuts down while running***

1. Check the overload setting on the starter and fuses.
2. Ensure that the proper voltage is supplied and that the wire size is correct.
3. Check for loose electrical connections.

4. Clean seal-fluid strainer.
5. Check the vacuum switch setting.
6. Check seal-fluid solenoid valve.
7. Check if the pump has seized by rotating the shaft or coupling by hand (disconnect power first), which should rotate freely. If a rubbing noise or binding is observed, contact the factory.
8. Check for scale build-up in pump.

## **Vacuum Problems**

### ***Unit operates, but does not achieve desired vacuum level***

1. Stop unit and disconnect power.
2. Check if the inlet valve is open and inlet filter is clean.
3. Ensure that no inlet connections are open to the atmosphere, causing loss of vacuum.
4. Check for leaks in piping system using conventional leak detection methods.
5. Ensure seal fluid level is correct; pump is primed and filled with seal fluid to the shaft centerline only.
6. Check if the seal-fluid isolation valve is open.
7. Check seal fluid temperature. This can affect vacuum level and capacity. Contact the factory.
8. Check if the solenoid valve is working.
9. Check setting of vacuum relief valve and adjust as needed. The valve is typically preset at 27" HgV at sea level.
10. Check the vacuum switch setting.
11. Check if the motor rotation is correct. Rotation should be clockwise (facing pump from motor side) and marked by an arrow on the motor or pump housing. If incorrect, switch any two of the three main power leads on the contactor inside the control panel.
12. For high vapor pressure sealing fluids, temperature could be too high, affecting performance.

## **Overheating Problems**

### ***Unit overheats***

1. Stop unit and disconnect power.
2. Check for proper water supply.
3. Check seal-fluid strainer.
4. Condensable vapor load entering the pump could be too high. Contact the factory.
5. Check for scale build-up in pump.
6. On full-recovery systems, check for proper cooling water temperature and sufficient cooling water supply flow rate to heat exchanger.
7. Condensable vapor load entering the pump could be too high. Contact the factory.

## **Noise and Vibration Problems**

### ***Unit is making an abnormal noise or sound***

1. Stop system and disconnect power.
2. Check the coupling and/or element for proper alignment. If worn or damaged, replace.
3. Check belt alignment on belt drive unit.
4. Check if the bearings are greased. Rotate the shaft or coupling by hand, which should rotate freely. If a rubbing noise or binding is observed, contact the factory.
5. Ensure seal fluid level is correct; pump is primed and filled with seal fluid to the shaft centerline only.
6. Check setting of vacuum relief valve and adjust as needed. The valve is typically preset at 27" HgV at sea level.
7. Check if the inlet valve is closed. The pump may cavitate if inlet is closed.
8. Check for scale build-up in pump.
9. Check the seal-fluid temperature, it could be too high.
10. Check the vacuum level, pump may cavitate as a result of a too deep of a vacuum level.

### ***Unit is vibrating excessively***

1. Stop system and disconnect power.
2. Check the coupling and/or element for proper alignment. If worn or damaged, replace.
3. Check if the bearings are greased. Rotate the coupling by hand, which should rotate freely. If a rubbing noise or binding is observed, contact the factory.
4. Check that the pump and motor mounting bolts are not loose. Tighten as required.
5. Check if baseplate is properly supported. Uneven floor will distort baseplate, which could cause vibration problems.